


## Besler - SV17080802

### REGISTER AND REPLACE PROCEDURE

**Register Procedure:** Upon applying power to the receiver, the receiver will enter registration mode for 10 seconds. During these 10 seconds, press and hold buttons **4** and **6** (see figure below for button reference) on the transmitter for about 5 seconds, at which time, transmitter will be registered to the receiver.

*The procedure outlined above doesn't require the user to open the receiver. Should the user wish to confirm if the register procedure was successful, the lid of the receiver must be removed. All red relay LEDs will flash twice, in unison, to indicate that the register procedure was successful.*

**Replace a transmitter:** If a transmitter is lost or broken and the user wishes to replace the transmitter, follow the Register Procedure, outlined above. If successful, the old transmitter will be erased from the receiver and the new transmitter will control the receiver.

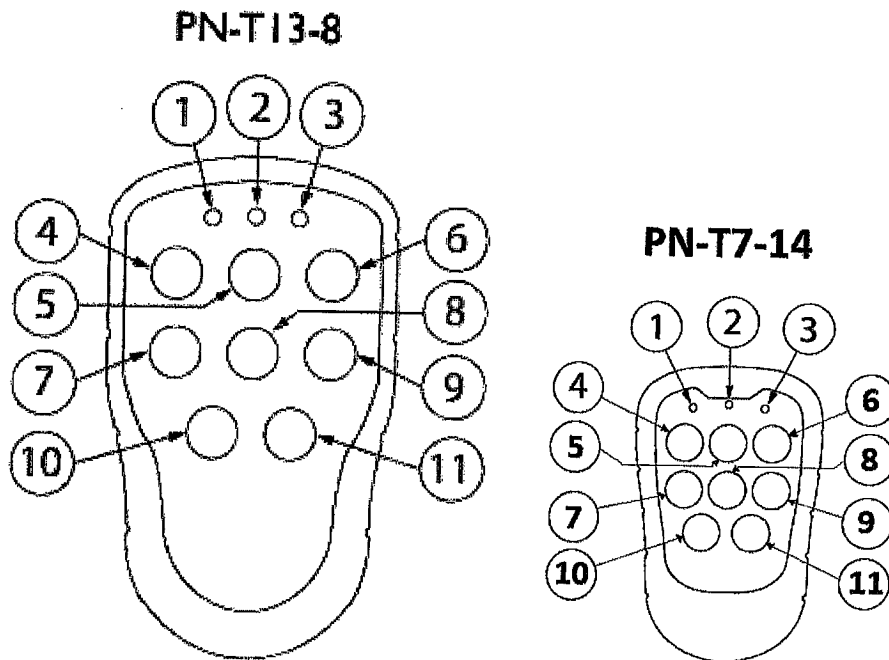

- 1. LED 1 (red)
- 2. Top LED (red, green)
- 3. LED 2 (red)
- 4. Button 1
- 5. Button 2

- 6. Button 3
- 7. Button 4
- 8. Button 5
- 9. Button 6
- 10. Button 7

- 11. Button 8