

Quality Built Since 1973 INSTALLATION AND SETUP MANUAL 7000 SERIES FLATBED DROP RAIL




Phone: (308)-697-4698 DATE: 8-30-2021

Please fill out the attached warranty card and return to Besler Industries, Inc.	
Keep the Following information for your own record:	
Name of Dealer:	
Date of Purchase:	
Model Number:	
Serial Number;	
Notes:	


MODEL 6000 FLAT BED INSTALLATION INSTRUCTIONS

- 1) Remove box from truck.
- 2) Cut truck frame to length. Measure from front of bed to backside of license plate panel. (Fig 1)(Save removed pieces for future Replacement)

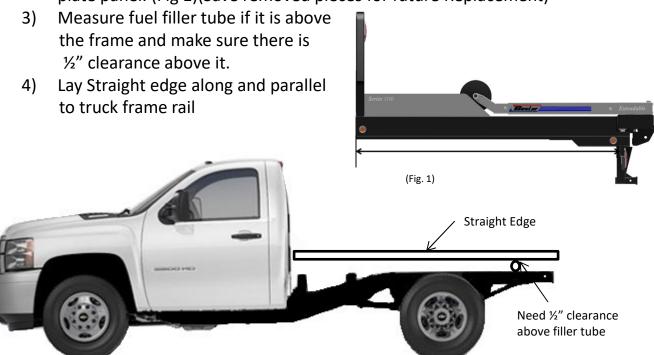

5) Center 2" x 3" tube at the front set of existing box mounting holes. (Point A)


NOTE: If truck frame rails are over 38" wide, 2" x 3" tubes must be provided by the installer.

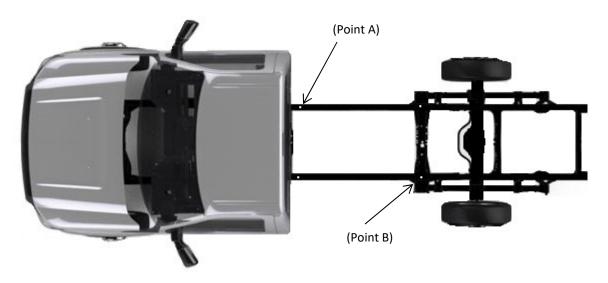


- 6) Drill tube to match existing holes in truck frame (5/8" Diameter)
- 7) Repeat Steps 5 & 6 for the 2" x 3" for (Point B)

8) Bolt tubes to truck frame rails using 5/8" x 1-1/2" bolts, lockwaskers, washer and nuts. (Fig 2)

 Add Shims to the top of tubes to get the straight edge parallel and level to truck frame. (Fig. 3)

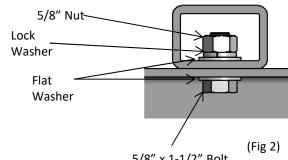


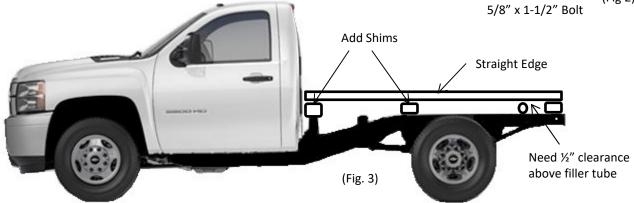


- 10) Double check clearance for fuel filler tube.
- 11) Weld Shims all around on top of crosstubes

 NOTE: All welding should be done by a qualified professional.

12) Center Flat bed on truck leaving 1" to 2" from back of cab to front of flat bed. (Fig. 4)

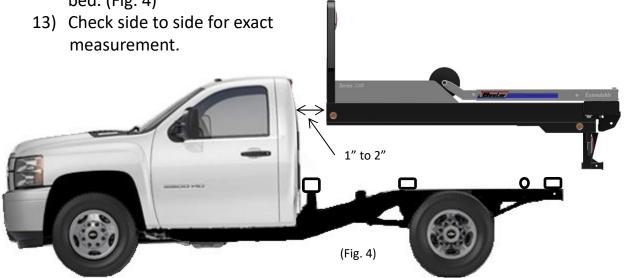


- 14) Double check all measurements and clearance
- Check cab to front of bed
- Fuel Filler Clearance
- Hydraulic Pan to truck frame
- 15) Bolt Angles to existing holes in truck frame (Point C)

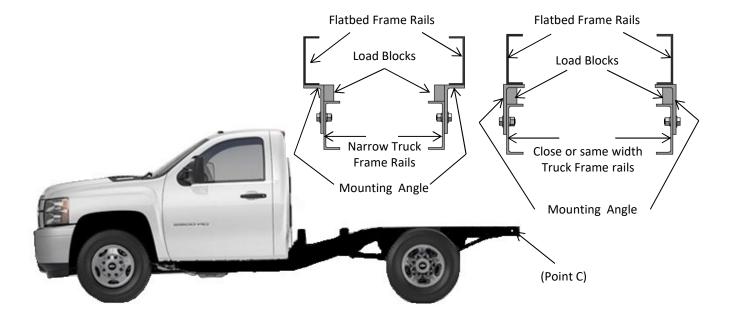


- 16) Cut load blocks to length and clamp to mounting angle. Load blocks will carry all of the weight of flat bed and cargo when properly installed.
- 17) Weld Load Blocks to mounting angles, weld angles to flat bed rails. CAUTION: DO NOT WELD ANY PART OF THE FLAT BED TO THE TRUCK FRAME RAILS.
- 18) Weld front tubes and shims to flat bed rails.



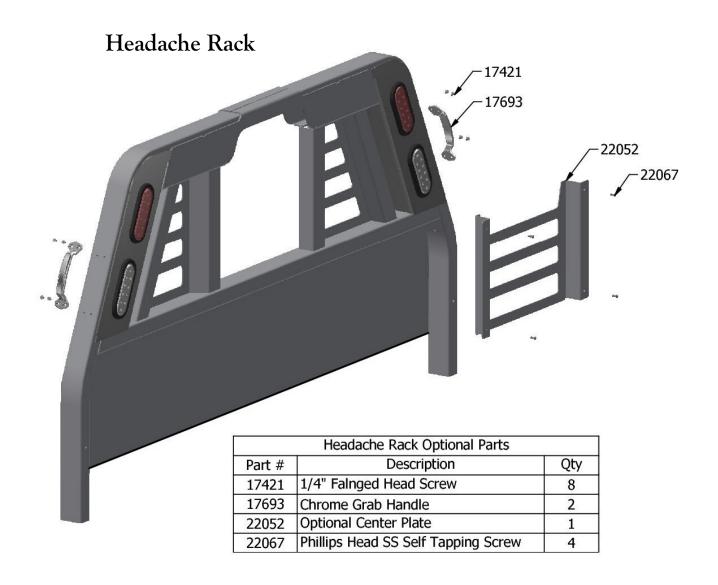


Standard Headache Rack

Optional Center Plate Large Opening for 5th Wheel Camera

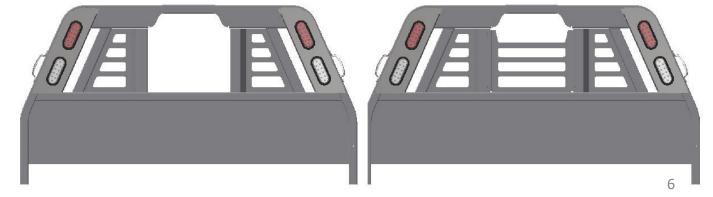



Resistors are hard wired into the headache rack harness on both sides just below the light connector.(DO NOT tape resistor to the wires it can get hot enough to melt wires if it does not have airflow around it)

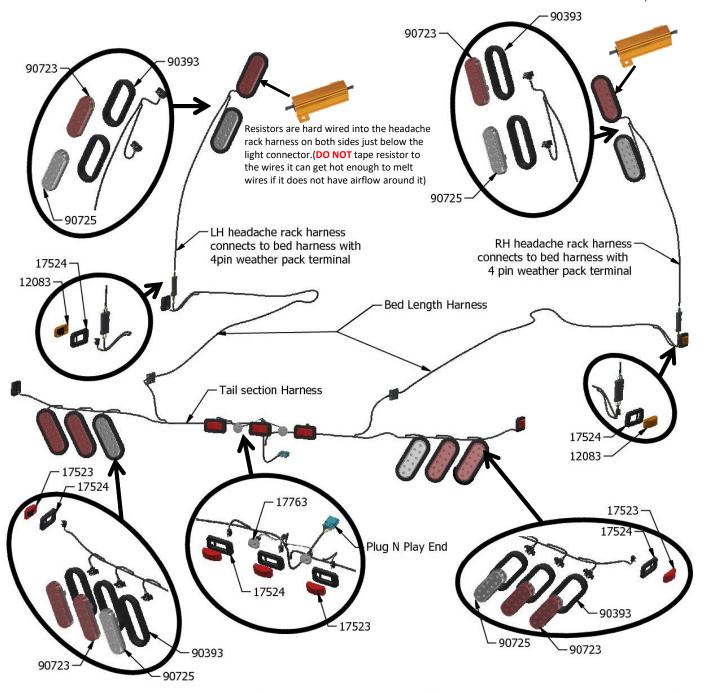

	Wire Harness Parts	
Part #	Description	Qty
90393	Oval Grommet	10
90723	Red LED oval light	6
90725	White LED oval light	4
17524	Rect. Rubber Grommet	7
12083	Rect. Amber LED light	2
17523	Rect. Red LED light	5
17763	LED License PLate light	2

Bedl Length harness		
Part #	Length	
22070	87"	
22071	103"	
22072	112"	
22073	136"	

Part #	Wire Harness Every Bed Description	Qty
22068	LH headache rack harness	1
22069	RH headache rack harness	1
22074	Tail section harness	1



Plug-N-Play **Connectors**

RAM





Part # JCTS9707

1997-07 Ford Bed Take Off



Part # JCTS0810

2008-10 Ford Bed Take Off



Part # JCTS425

2011-16 Ford Bed Take Off w/camwrs



Part # JCTS426

2017 & up Ford Bed Take Off



Part # JCTS306

1999 and up Ford Cab & Chassis



Part # JCTS564

2020 Ford Bed Take Off

WARNING

This connector may need to be modified See page 8 for more information.



Part # FRD-BLIS

Only added to 2020 Ford Bed Take Off with the Blind spot Package. To Install Cut the red Wire from JCTS564 and splice Into this end, this has to be Purchased with JCTS564



Part # JCTS1230

Generic Adapter can be used For most Ram trucks, Most Ram trucks do not have quick Connects. Wiring this end will Make it easy to unhook if ever Needed.



Part # JCTS307 1999 and up Ram

Cab & Chassis



Part # JCTS300

2015 only GM Trucks



Part # JCTS353

2016 & up GM Trucks

Part # 6807-CM-MD-DTY

2019 & up GM 4500-6500 Cab & Chassis



Part # JCTS541

2020 GM

2500-3500





Inline Resistors are sold in pairs. Unplug wire harness from turn signal, plug the resistor into the turn signal and connect harness to the other end of resistor, then secure 8 the weight of resistor with screw or zip ties.



This connector uses a Hopkins Converter to separate the turn signal and brake light. Under Normal driving conditions this connector works fine. It cannot handle running the flashers For very long or it will burn chip inside converter. Hopkins will not warranty this because it Is made for turn signals not flashers. They suggest 2 ways of dealing with it.

1. Wire external flashers on vehicle – like the hideaway flashers you can get in a kit.

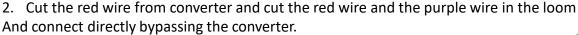

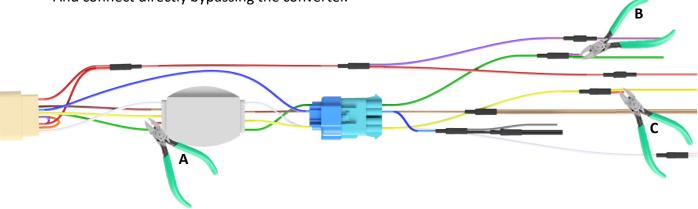

Cut the Red wire coming off the converter (A). About 5 to 6 inches front the blue or brown Plug n play adapter on wire harness, (you will have to remove some of the protective covering) find where the **green** and **purple** wires are joined and separate the **purple** wire (B), Then find Where the **yellow** and **red** wires connect and separate the **Red** wire (C). Now join the **Purple** And **Red** wire together and connect to **red** wire by the converter, now the circuits are independent. Make sure to use good heat shrink with sealant to make sure your connections are watertight.

BESLER INDUSTRIES, INC.

BESLER FLATBED TWO YEAR LIMITED WARRANTY

STATEMENT OF WARRANTY

1) WHAT IS COVERED BY THIS WARRANTY:

Besler Industries, Inc. warrants to the original retail purchaser only, that all equipment, parts and accessories which it manufactures are free from defects in material or workmanship under normal use, service, proper setup and adjustment. The duration of this warranty is two (2) years from the date of delivery with some limitations on specific parts mentioned below.

This warranty is limited to repair or replacement of part or parts, to the original purchaser, found by the manufacturer, through the authorized selling dealer, to be defective in material or workmanship in the warranty period. This warranty shall be effective only when the part or parts have been authorized for return or replacement by Besler Industries, Inc., and returned prepaid by the dealer or purchaser to Besler Industries, Inc. Consult your dealer before removing any parts or making repair. For Warranty claim, notify the selling dealer.

2) WHAT IS NOT COVERED BY THIS WARRANTY:

Besler Industries, Inc., does not warranty: (a) damage caused by use for purposes other than those for which it was designed: (b) repairs made by unauthorized persons: © damage caused by neglect, abuse, abnormal use, improper or unreasonable use, accident, or misuse: (d) damages caused by unauthorized attachments, alterations, or modifications: € damage caused by improper service, setup or adjustments: (f) Besler equipment which has had a serial numbers removed or made illegible: (g) normal wear (h) transportation to and from authorized dealer's place of business or Besler Industries, Inc.

LIMITATIONS TO WARRANTY

The following parts are covered under the original warranty for the specified time indicated by each item.

Two (2) Years from time of purchase: Structure and welds

*Warranty on merchandise not of Besler Industries, Inc., supplied in piece or in component assemblies will be dependent on the manufactures warranty, some limitations may apply.

4) DISCLAIMER OF WARRANTY:

The foregoing warranties are in lieu of all other warranties of merchantability and fitness for a particular purpose. Any implied warranty of merchantability or fitness for a particular purpose is limited to the duration of this limited warranty. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

5) Besler Industries, Inc. reserves the right to improve products through modifications and changes in design or material without being obligated to incorporate such changes in prior manufacture.

6) WARRANTY REGISTRATION:

The Warranty registration card must be completed and forwarded to Besler Industries, Inc., Box B, Cambridge, NE 69022. Within 10 days following date of purchase. Warranty will not be granted unless a warranty card is on file at Besler Industries, Inc. The Date of purchase constitutes delivery.