


Pistol Grip 2 Wiring Instructions

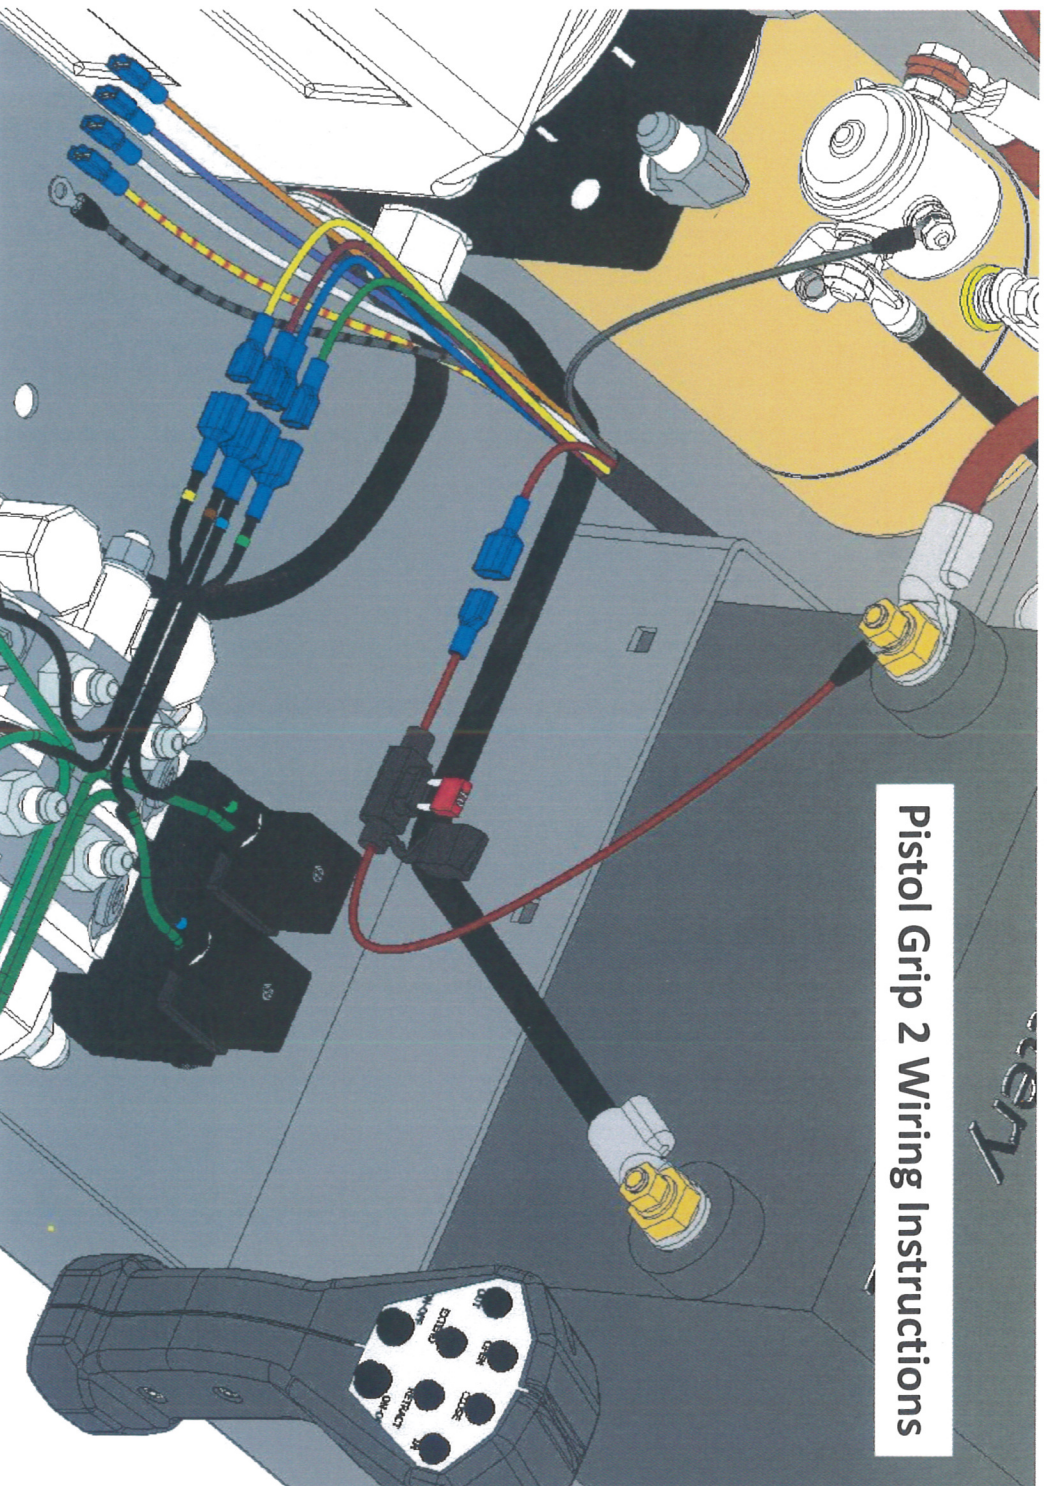

Correct way to wire new grip

The pump will not run when the ON/Off buttons are activated, its 12v power only

1. Connect **Gray** wire to terminal on pump solenoid
2. On the 2 section valve setup make sure to cover the **Gray/Black** stripe wire so it cannot short out.
3. Plug the **Green** wire into the Green marked wire from valve.
4. Plug the **Blue** wire to the Blue marked wire from valve.
5. Plug the **Brown** wire to the Brown marked wire from valve.
6. Plug the **Yellow** wire to the Yellow marked wire from valve.
7. Make sure both **Orange** and **Purple** wires are covered as they are not used.
8. **White** and **Yellow/Red** stripe wires are used with the ON/OFF Buttons — click once to turn on click again to shut off.
9. The **Red** Wire will have a short pigtail with a 10 amp fuse. It can be installed as shown, going to the battery in the bed. It is recommended to add a jumper wire and connect the fused pigtail to the battery under the hood of the truck. This will make it easier to replace especially if you have a bale on the pickup at the time.



Pistol Grip 1

All Buttons are the same



Pistol Grip 2

Has tall On/Off Buttons