Plug-N-Play Connectors

Ford



Part # JCTS9707
1997-07 Ford
Bed Take Off



Part # JCTS0810
2008-10 Ford
Bed Take Off



Part # JCTS425
2011-16 Ford Bed
Take Off w/camwrs



Part # JCTS426
2017 & up Ford
Bed Take Off



Part # JCTS306
1999 and up Ford
Cab & Chassis



Part # 21900
2020-22 Ford Bed Take Off

Important:
Not all fords with blind spot indicator will need this but Some of them do. If the vehicle has a second 12 pin plug Then connect this with the brake wires. If the vehicle only Has one plug this one is not needed



Part # FRD-BLIS



Part # 1353-20-FBTO
2020-22 Ford Bed Take Off

Note: This connector was not made for our harness but can be used. Instead of the one short brake wire it has 2 red wires 46" long. Do the same as the 21900 open the wire harness on the bed side 4 to 6" from the plug end. The purple and Red wires are the brake wires. Cut the two 46" long red wires to match the purple and red wires, join them together and the circuits will be split.



Part # CB-23FBTO-WP
2023 & up Ford Bed Take Off

RAM



Part # JCTS1230
Generic Adapter can be used For most Ram trucks, Most Ram trucks do not have quick Connects. Wiring this end will Make it easy to unhook if ever Needed.



Part # JCTS307
1999 and up Ram
Cab & Chassis



Part # 31392
2019 -25 Ram No resistor



Adapter Ram LED
Part # 238868-FL


The 2019 ram has two 6 pin connectors Some of the rams have 12pin connectors plug this adapter into Part # 31392 to go From 6 pin to 12 pin



Adapter Ram
Part # 31392-2026

Note: This connector will Be discontinued when we Run out and replaced with 31392-2026

2019 -26 Ram No resistor

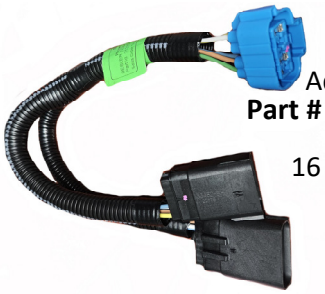

Adapter Ram LED
Part # 31392-2026-16

16 pin connectors

GM



2015 only GM
Trucks
Part # JCTS300



2016 & up GM
Trucks
Part # JCTS353



2019 & up GM
4500-6500 Cab
& Chassis

Part # 6807-CM-MD-DTY




Part # JCTS541
2020 GM
2500-3500

2024 & UP
Bed Take Off



Part # JCTS2024
Modified to work
Replace by
1353-GM-RLY

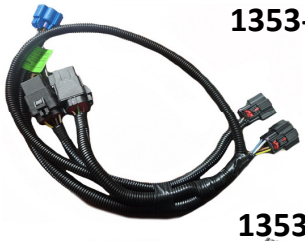

1353-25GM-RLY
2024& Up
Combined Brake
And Turn
Bed Take Off



1353-25GMCVRL
2024 & Up
Separate Brake
And Turn
Bed Take Off

Resistors

Part # 55041



Inline Resistors are sold in pairs. Unplug wire harness from turn signal, Plug the resistor into the turn signal and connect harness to the other end of resistor, Then secure the weight of resistor with
Screw or zip ties.