

## Hooking Up Wireless Receiver

For clarity this picture only shows the long pigtail for receiver.

- Gray - terminal on pump solenoid
- Gray/Black - terminal on pump solenoid
- Red - Positive terminal of battery - brass stud
- Black - Negative terminal of battery - Brass stud
- Green - matches black wire with green zip tie on valve
- Blue - matches black wire with blue zip tie on valve
- Brown - matches black wire with brown zip tie on valve
- Yellow - matches black wire with yellow zip tie on valve


## 2 Valve Setup

- Purple - This wire is not Used - tape off
- Orange - This wire is not Used - tape off
- Yellow/Red Stripe - Aux wire can be used for cake feeder or lights the button on remote is a 1 click on and 1 click off button

## 3 Valve Setup


- Purple - matches black wire with purple zip tie on valve
- Orange - matches black wire with orange zip tie on valve
- Yellow/Red Stripe - Aux wire can be used for cake feeder or lights the button on remote is a 1 click on and 1 click off button

Control Cord and small pigtail on separate page

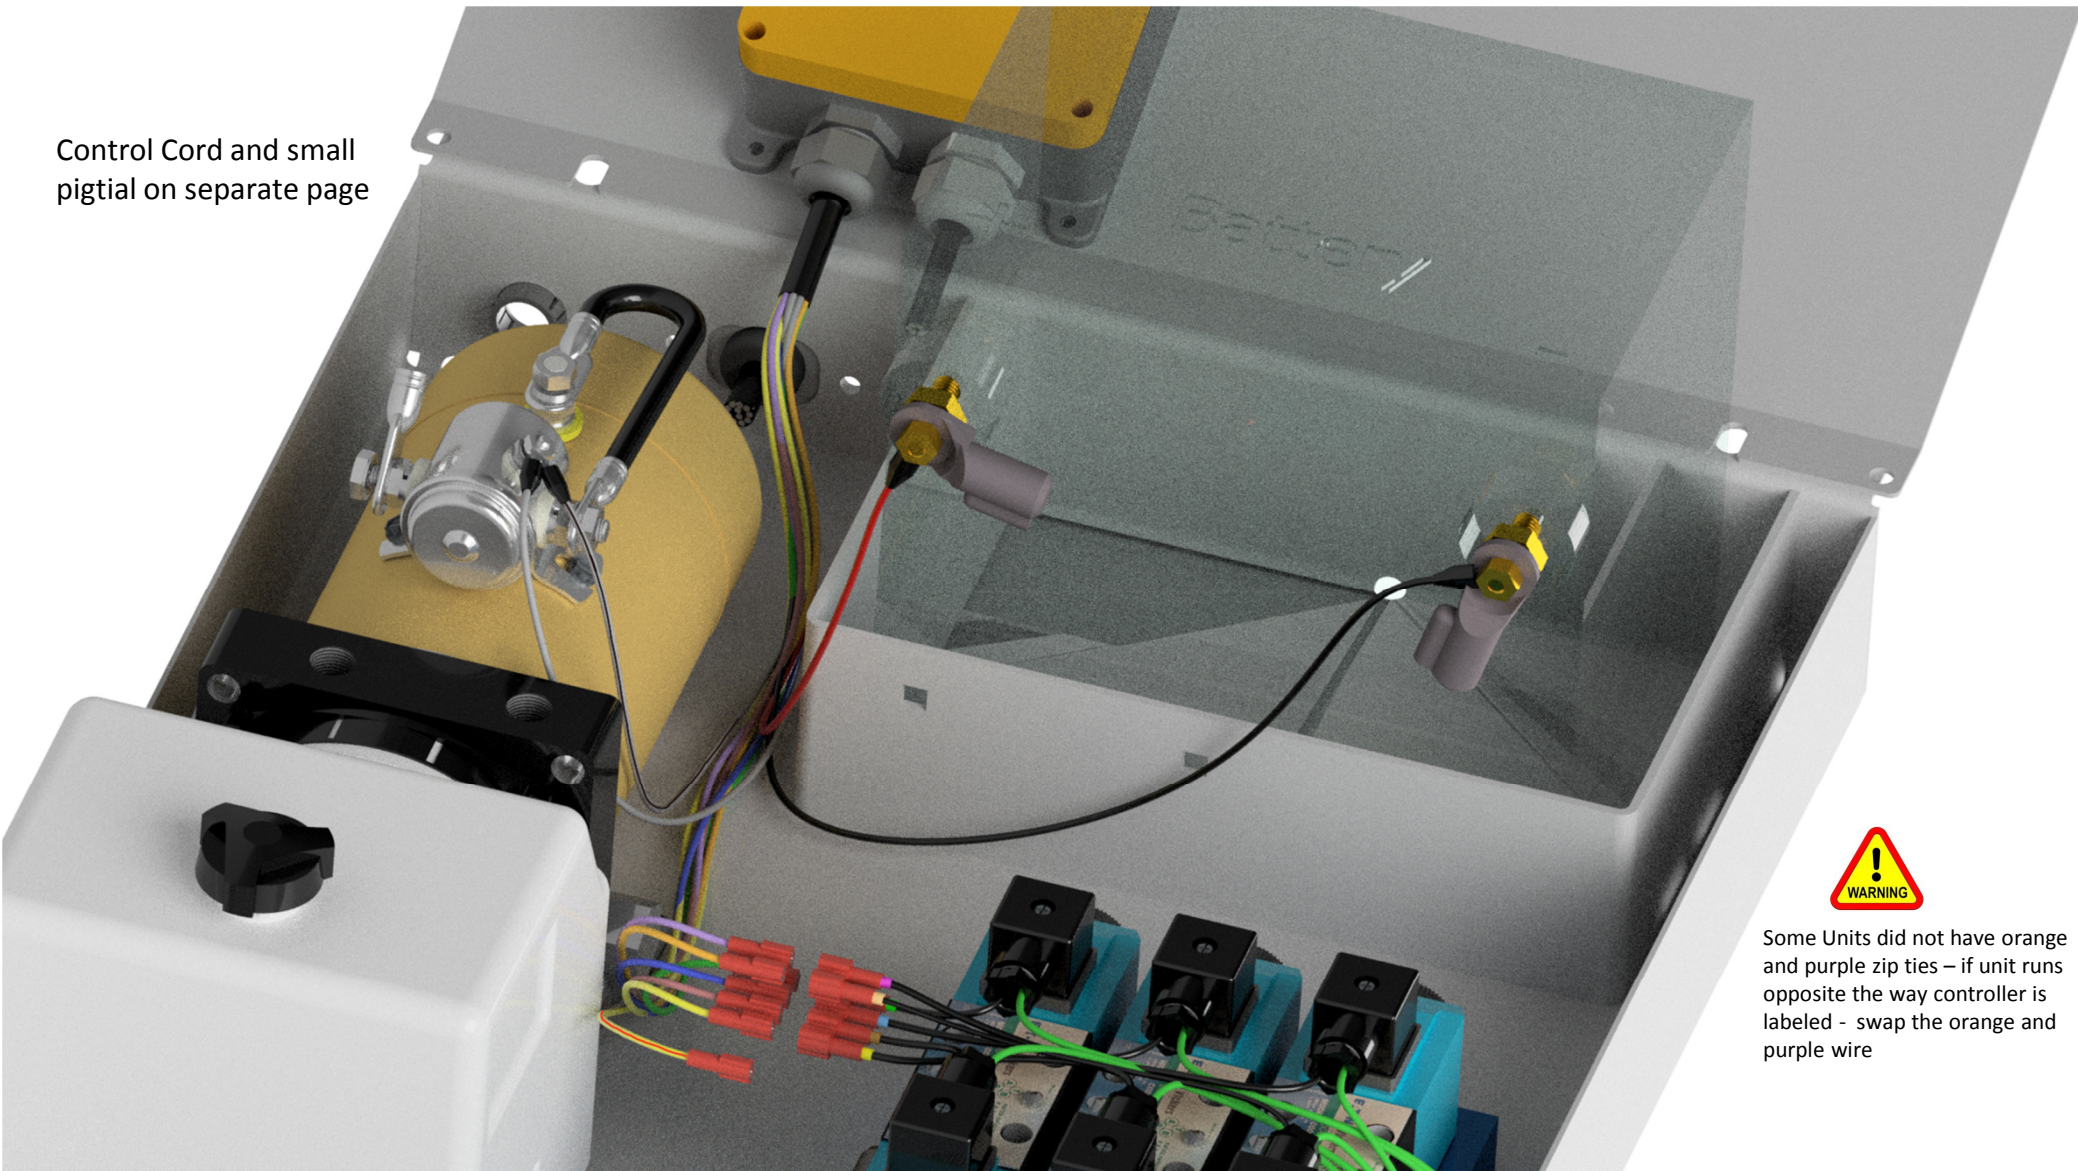

Some Units did not have orange and purple zip ties - if unit runs opposite the way controller is labeled - swap the orange and purple wire



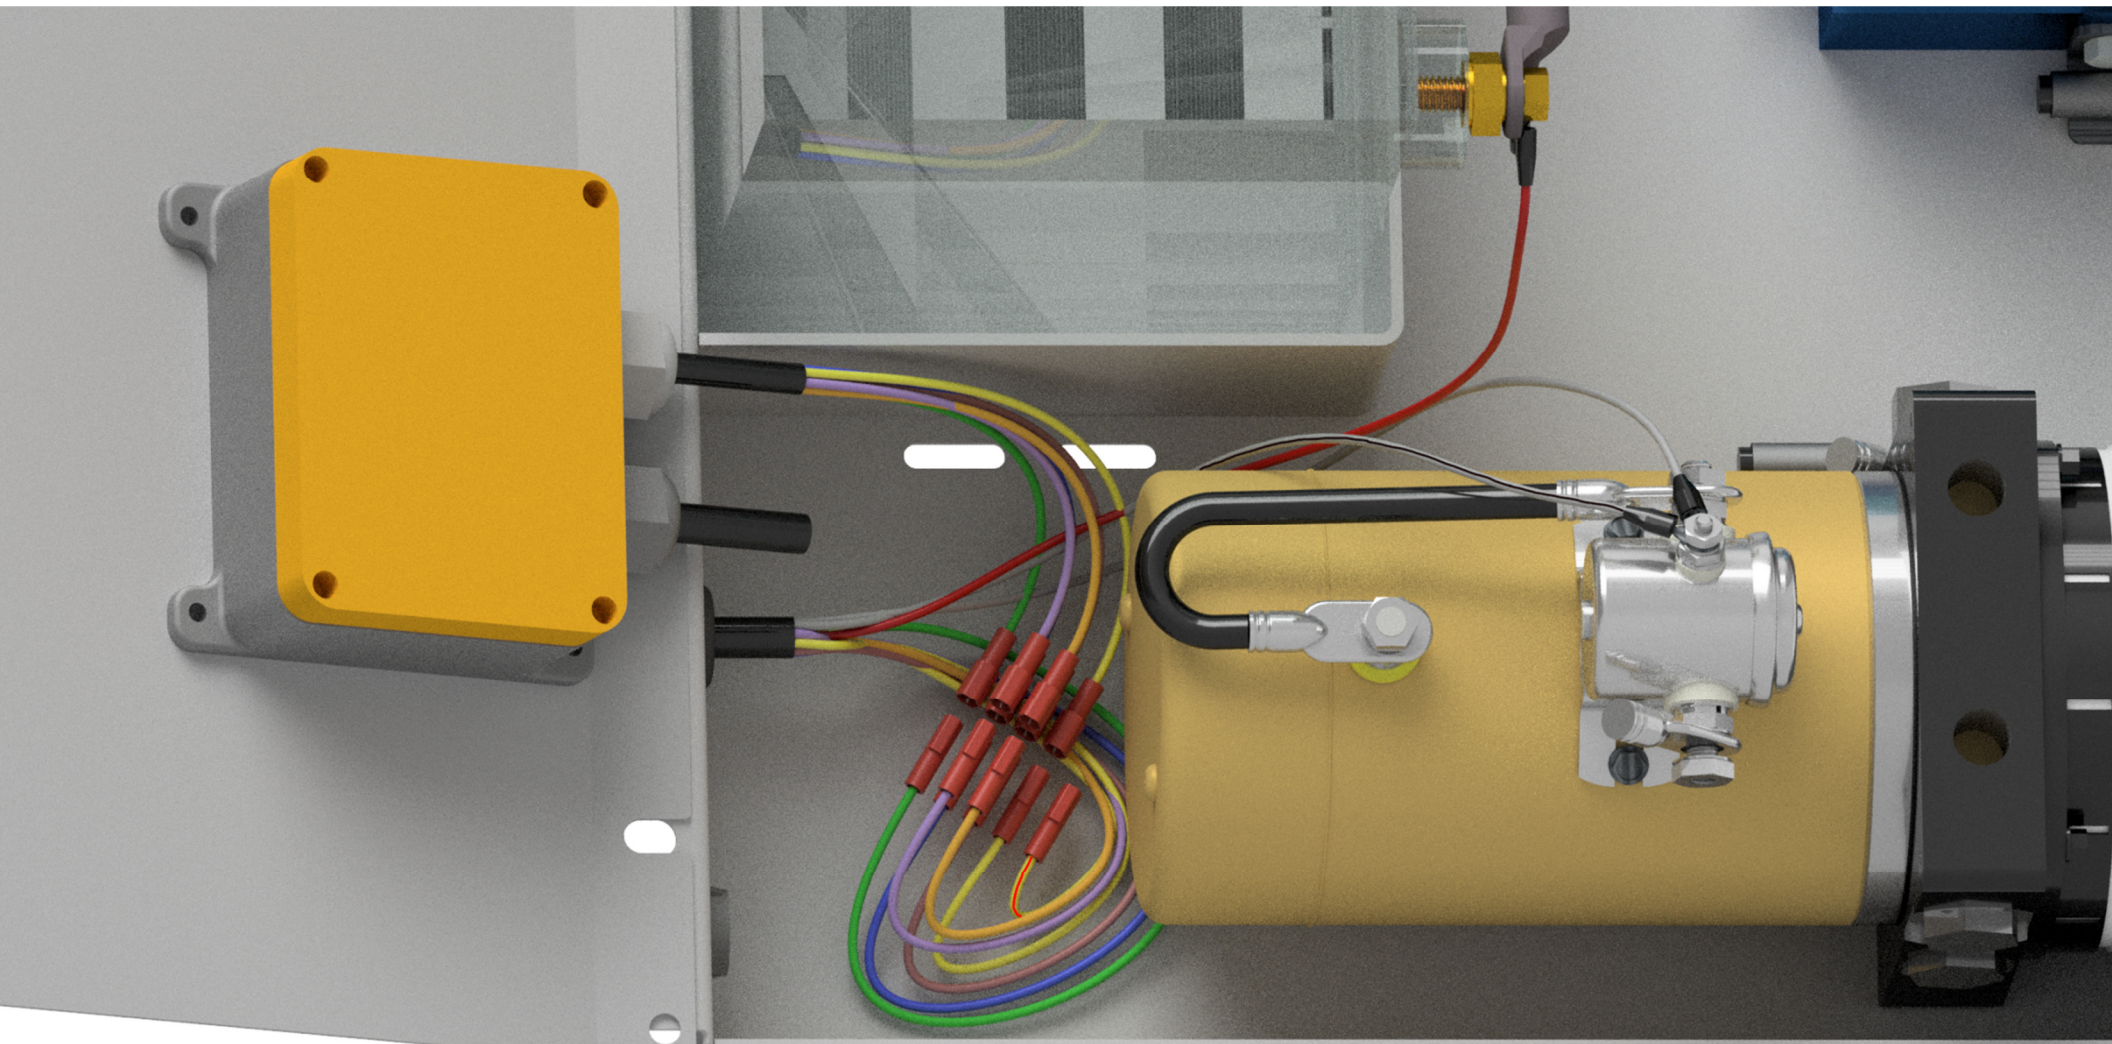

## Hooking up wireless to control cord

The short Pigtail from receiver connects to the control cord.

- Green wire from receiver - Matches green wire from control cord
- Blue wire from receiver - Matches blue wire from control cord
- Brown wire from receiver - Matches brown wire from control cord
- Yellow wire from receiver - Matches yellow wire from control cord

## Hooking up rest of Control Cord

The Other wires on both old and new control cords

- Gray Wire - to pump solenoid
- Gray/Black wire - new controller only - to pump solenoid
- Red Wire - to Positive side brass terminal on battery

## Old Control Cord

The short Pigtail from receiver connects to the control cord. The old control cord Will not have as many wires.

- Purple wire from receiver - Is not used - tape off
- Orange wire from receiver - is not used - taped off

## New Control Cord

The short Pigtail from receiver connects to the control cord.

- Purple wire from receiver - Matches purple wire from control cord
- Orange wire from receiver - Matches Orange wire from control cord